## FALSE FRONT REMOVAL & ADJUSTMENT



## TO REMOVE: TO ADJUST: - Open door or remove drawer below false front - Move false front up/down or left/right by tapping it by - Remove false front by hand or rubber mallet (ill.1) tapping it from the inside by hand or rubber mallet

